

# Massage Oil Warmer

## Operation Manual

### Table of contents

### Overview

#### Scope of delivery

1x massage oil warmer

1x glass carafe with cork

1x instruction manual

1x dry cloth

#### Technical data

- Item number: P2971-K
- Power consumption 1A
- 50/60 Hz
- W<sub>max</sub> 220-240
- Protection class: I

#### General informations

Please read all instructions and notes carefully. Afterwards, keep these instructions in a safe place, so you can refer to them later if necessary. If you pass the product on to someone else, please also include this manual.

#### Intended use

This appliance is designed exclusively for heating massage oils and keeping them heated up to 100 °C. The maximum permissible diameter for glass **carafes** is 71 mm.

The massage oil warmer must only be used in accordance with the operation instructions. Please consider and observe the provided safety instructions at any time. Operational safety is only guaranteed if the appliance is used as intended. Any other use may cause damage to the appliance or injury to persons and must therefore be avoided. The manufacturer accepts no liability for damage caused by improper use.

If the unit is used commercially, the operator is obliged to determine the compliance of the occupational safety measures with the current state of the regulations, as well as to observe new regulations during the entire use of the unit. Outside the European Union, the occupational safety laws and regional regulations applicable at the place of use of the unit must be observed.

In addition to the work safety measures, the generally applicable safety and accident prevention regulations as well as the applicable environmental protection regulations must be observed and complied, depending on the area of application.

### **General safety instructions**

- Do not immerse the cable, the plug or the unit in water or other liquids. There is a danger to life from electric shock.
- Unroll the mains cable completely before use and do not stretch the cable too tightly. Also make sure that no one can trip over the cable or over the appliance, otherwise there is a risk of the appliance tipping over.
- Keep a sufficient distance from hot surfaces, such as hobs or ovens, to avoid damage to the appliance and the power cord.
- Only connect the appliance to a grounded socket. Always make sure that the plug is firmly seated in the socket and that the socket is still accessible.
- Check that the mains voltage you want to use matches that of the appliance. You will find the information on the type plate beneath the warmer.
- If an extension cable is used, it must be ensured that it has at least the same cross-section as well as an earth connection.
- Do not use the appliance if the mains plug, the mains cable or the appliance itself is defective or damaged.
- Operation in moving vehicles, e.g. railway carriages and ships, is excluded.
- Do not carry out any repairs on the unit yourself. Never open the unit without authorisation. Always have repairs carried out by a qualified specialist. Opening and/or repairing the unit on your own will invalidate all warranty and liability claims.
- The appliance is intended for use by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they have been given supervision and instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its connecting cable away from children under the age of 8.
- Cleaning and user maintenance must not be carried out by children under the age of 8 unless they are 8 years or older and supervised.
- Children must not play with the appliance.
- If the appliance is used by or near children, be especially attentive and careful.
- For the safety of your children, do not leave any packaging parts (plastic bags, cardboard, polystyrene, etc.) within reach.
- Do not let small children play with foil. There is a danger of suffocation.
- Take care not to spill water on the mains plug.
- Never operate the appliance without water.
- Always place only intact glass carafes with corks in the massage oil warmer before adding water.
- Make sure you add water before switching on the massage oil warmer.
- Be aware that hot water can cause scalding. Be careful if the massage oil warmer contains hot water.
- The surfaces of the appliance may become hot during use and have residual heat after use.
- Do not move the appliance when it contains hot liquids.
- When the massage oil has reached the required temperature, remove the carafe from the appliance and dry the bottom of the carafe with a cloth.
- Unplug the unit when not in use.
- The surface of the heating element may give off waste heat after use.
- Let the appliance cool down before cleaning it.
- Follow the instructions for descaling to avoid irreparable damage.

- Remove the unit from the box and check the unit for external damage. If you see any damage, do not use the unit.
- Remove all packaging and make sure that the entire scope of delivery is included.

## Operation

Always place the appliance on a dry and leveled surface. Make sure that there is enough water in the container when heating massage oil. When the carafe is inserted, the inner water container must be completely filled with water up to approx. 1 cm before the white edge of the container. This corresponds to about 110 ml.

### Warm up massage oil

1. Fill massage oil into a carafe and place it in the massage oil warmer. Fill the container with water up to the level of the oil. If you have a large amount of oil, fill with water to approx. 5mm below the white rim.  
Preferably use distilled or demineralised water to prevent limescale deposits.
2. Insert the mains plug into a suitable socket and set the rotary switch on the front of the appliance to the desired temperature range.  
Level 1 ~ 40 - 45 °C  
Stage2 ~ 70 - 80 °C  
Level 3 ~ 100 °C
3. The operating light turns on. This indicates that the appliance is in operation. The operating light turns off when the set temperature is reached and the appliance automatically switches to the keep-warm function.

**Warning!** Keep your hands away from the hot water of the appliance. While the appliance is heating or filled with hot water, do not move or reposition it.

On level 1, the temperature of 40 to 45 °C is reached after about 5 minutes. After a short time you will find out how to adjust the appliance to get the ideal temperature.

4. Remove the carafe from the massage oil warmer and turn the rotary switch for the temperature setting back to the 0 position after the heating process is finished. Disconnect the appliance plug from the mains and pour the water out of the massage oil warmer.

Before using the massage oil, it must be ensured that it has a skin-friendly temperature. This is a maximum of 50 °C and can be precisely checked, for example, by the usage of a thermometer.

5. Wipe out the inside of the appliance with a damp cloth to remove leftovers. A suitable cloth is enclosed with your massage oil warmer.

### Cleaning and maintenance

Warning! To avoid the risk of electric shock, injury or damage:

- Always disconnect the mains plug from the mains socket before cleaning.
- Let the appliance cool down before cleaning.
- Never immerse the unit in water.
- **Caution!** Never use abrasive, corrosive or scratching cleaning agents. This could damage the unit.

Wipe out the appliance with a damp cloth. Do not hold the appliance under water or clean it in the dishwasher.

Descal the appliance after repeated use (depending on your water hardness) with e.g. 100 ml vinegar water (hot mixture of approx. 75 ml water and 25 ml vinegar) to ensure proper functioning of the appliance. The soaking time is approx. 30 minutes, afterwards clean the surfaces with a damp cloth.

## Storage

Store the massage oil warmer in a dry and clean place, out of reach of children. We recommend storing the appliance in its original packaging.

## Disposal

Dispose of the packaging in an environmentally friendly way. These are raw materials that can either be reused or recycled.

At the end of its service life, this product must not be disposed with normal household waste, yet must be taken to a collection point for the recycling of electrical appliances. The symbol on the product, in the instructions for use or on the packaging indicates this. The materials can be reused according to their labeling. By reusing, recycling or otherwise recovering old appliances, you are making an important contribution to protecting our environment.

You can hand in the old appliance at a recycling centre or a collection point for electrical waste. If you have any queries, please contact your local waste disposal company or your local authority.

The Electrical and Electronic Equipment Act (ElektroG) contains a large number of requirements for the handling of electrical and electronic equipment. The most important ones are summarised here.

### 1. separate collection of waste equipment

Electrical and electronic equipment that has become waste is referred to as WEEE. Owners of WEEE must dispose of it separately from unsorted municipal waste. In particular, WEEE does not belong in household waste, but in special collection and return systems.

### 2. batteries, accumulators and lamps

As a rule, owners of WEEE shall separate spent batteries and accumulators that are not enclosed in the WEEE, as well as lamps that can be removed from the WEEE without causing damage, from the WEEE before handing it over to a collection point. This does not apply if WEEE is prepared for reuse with the participation of a public waste management authority.

### 3. possibilities for the return of old appliances

Owners of WEEE from private households can hand it in free of charge at the collection points of the public waste management authorities or at the take-back points set up by manufacturers or distributors within the meaning of the ElektroG.

Shops with a sales area of at least 400m<sup>2</sup> for electrical and electronic equipment as well as those grocery shops with a total sales area of at least 800m<sup>2</sup> that offer electrical and electronic equipment several times a year or on a permanent basis and make it available on the market are subject to the take-back obligation. This also applies to distribution using means of distance communication if the storage and dispatch areas

for EEE are at least 400m<sup>2</sup> or the total storage and dispatch areas are at least 800m<sup>2</sup>. Distributors shall generally ensure take-back by providing suitable return facilities at a reasonable distance from the respective end user.

The possibility of returning an old appliance free of charge exists for distributors who are obliged to take it back, inter alia, if a new appliance of the same kind which essentially fulfils the same functions is supplied to an end user. If a new appliance is delivered to a private household, the similar waste appliance may also be handed over there for collection free of charge; this applies in the case of distribution by means of distance communication to appliances of categories 1, 2 or 4 according to Article 2(1) ElektroG, namely "heat exchangers", "display screen equipment" or "large appliances" (the latter with at least one external dimension exceeding 50 centimetres). End-users are asked about their intention to return electrical and electronic equipment when they conclude a purchase contract. In addition, there is the possibility of free return at collection points of the distributors, irrespective of the purchase of a new appliance, for such waste appliances which do not exceed 25 centimetres in any external dimension, limited to three waste appliances per type of appliance. Manufacturer information according to §18 para. 4 ElektroG

#### 4. data protection notice

Old devices often contain sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the end-of-life devices to be disposed of.

#### 5. meaning of the symbol "crossed-out dustbin"

The symbol of a crossed-out dustbin regularly displayed on electrical and electronic equipment indicates that the respective device must be collected separately from unsorted municipal waste at the end of its service life. Manufacturer information in accordance with §18 Para. 4 ElektroG.

## Declaration of conformity

This massage oil warmer bears the CE marking and has been manufactured in accordance with the harmonised European standards. The appliance is in compliance with the essential requirements of the European Electromagnetic Compatibility Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU the RoHS Directive 2011/65/EU + 2015/863 and the Ecodesign Directive 2009/125/EC. The declaration loses its validity if a change has been made to the device that has not been agreed with us.

TrendShed GmbH  
Trenntrader  
Weg 2724149  
Kiel

As we are constantly developing and improving our products, we reserve the right to make technical and design changes.

Status: October 2021